# **OWNER INFORMATION**



# SLIDEOUT COVER

# RV

- Automatically opens and closes with the room.
- Shades the top of the room to help cool the interior.
- The positive slope protects the room from water, dirt and debris when the room is extended.
- Automatic anti-billow lock when the room is closed. No manual adjustments or setting are required.



# MAINTENANCE

Maintaining the Carefree Slideout Cover is easy. Just follow these basic steps:

- Periodically check that the fasteners are tight. Tighten if necessary.
- Keep the awning fabric clean.

# FABRIC CARE

⚠CAUTION DO NOT USE OIL BASED CLEANERS OR ANY CAUSTIC, GRANULATED, OR ABRASIVE TYPE CLEANERS ON YOUR CAREFREE PRODUCT.

- One of the best ways to keep the fabric looking good and to delay the need for deep or vigorous cleanings is to hose fabrics off on a monthly basis with clear water. This practice will help prevent dirt from becoming deeply imbedded in the fabric. In most environments, a thorough cleaning is only required every two to three years.
- 2. When it's time for a thorough cleaning, the fabric can be cleaned while still on the coach.
  - For Vinyl Fabric Use a soft brush and warm water with soap.
  - For Acrylic Fabric Use a stiff brush and warm water with soap.
- When cleaning the fabric, it is important to observe the following:
  - Always use a natural soap, never detergent.
  - Water should be cold to lukewarm, never more than 100°F.
  - · Air-dry only. Never apply heat to the fabric.
  - Always allow the fabric to dry thoroughly before rolling up the awning.

## Mildew

Mildew is a fungus growth that looks like dirt. Vinyl coated polyester fabrics are mildew resistant because of a chemical biocide in the vinyl coating. Under ordinary conditions, mildew will not appear. However, in areas where high temperature and humidity are common, mildew can be a problem and required the material to be cleaned more frequently. Thoroughly rinse the fabric with clean water and allow to air dry completely before rolling up the fabric.

# Pooling

When water collects on the top of the fabric, this is known as "pooling". This can occur during inclement weather or if a running air conditioner discharges over the awning. The water is dumped when the awning is retracted. It is recommended that if water accumulates on the top; retract the room in steps (8"-12") to dump the water. This will help prevent the fabric from stretching or distorting.

IMPORTANT NOTE: If the room must be closed during wet weather (rain), close the room in increments (approximately 8"-12"). This is to allow water to run off while the room is closing and prevent sudden pooling.

# CAREFREE MAJOR PRODUCT LIMITED WARRANTY

Carefree of Colorado (hereafter referred to as Carefree) warrants to the first retail Purchaser that the Carefree of Colorado (nerealis) resolved and workmanship within the terms and conditions as set forth in the warranty statement available online at www.carefreeofcolorado.com. Carefree's obligation under this warranty is limited to the repair or replacement, at Carefree's option, of any defective component with new

OWNER MUST RETAIN THE ORIGINAL PROOF OF PURCHASE AND/OR HAVE THE PRODUCT WARRANTY REGISTRATION ON FILE AT CAREFREE FOR WARRANTY CLAIMS.

THIS WARRANTY IS NOT TRANSFERABLE.

## For

- Warranty Duration;
- Warranty Coverage and Exclusions;
- Warranty Terms of Coverage; and,
- Warranty Claim Procedures

Refer to publication 052580-111 "Carefree Major Product Limited Warranty" available online at www.carefreeofcolorado.com

Register your Carefree products on-line at www.carefreeofcolorado.com

IMPORTANT NOTICE: It is strongly recommended that adjustments and repairs be performed by trained technicians at your Authorized Carefree Dealer. Work performed by non-authorized persons or businesses may void warranty.

# DO NOT DISCARD THIS DOCUMENT!



THIS DOCUMENT MUST BE DELIVERED TO THE CONSUMER AT TIME OF PURCHASE.

# SLIDEOUT COVER

SLIDE OUT ROOM COVER



- € 1. Scan the QR Code
  - 2. or go to

# www.caretreeotcolorado.com/slideoutcover

Click on the "Support" tab for warranty and other information about your awning.

## **OPERATION**

The Slideout Cover automatically opens and closes with the room.

## CARE AND MAINTENANCE

△ CAUTION Do not use oil pased cleaners or any caustic, granulated, or abrasive type cleaners on your Carefres product.

- 1. Use a quality vinyl cleaner or warm water with a natural soap (never detergent) and gently clear, the factic Donot scrub.
- 2 Allow the rabrit to dry thoroughly before retracting
- 5. Periodically inspect and tighten any loose screws as necessary

## POOLING

When water collects on the top of the fabric, this is known as "pooling". This can occur during inclement weather of a running air conditioner discharges over the awning. The water is dumped when the awning is retracted. It is recommended that if water accumulates on the top retract the room in steps (8"-12") to dump the water. This will have prevent the fabric from stretching or disjoicting.


It is strongly recommended that repairs and/or service be performed by trained technicians at your Authorized Careffee Dealer. Work performed by non-authorized persons or businesses may your warranty



# SL WINDOW AWNING

MANUAL PULL DOWN WINDOW AWNING

# Installation and Operations Manual

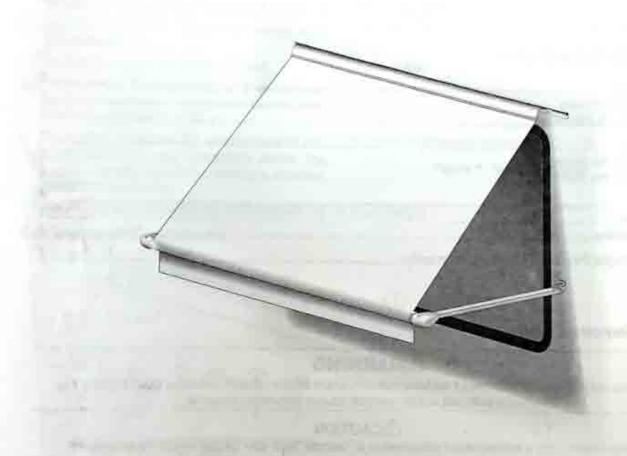


# **OPERATION**

To Lower the Awning: Using the pull cane, hook or grasp the pull strap and pull the awning down. Hook the loop of the pull strap onto the catch.

Tip: During windy conditions, the strap may vibrate and "hum". To reduce this Catch - effect, twist the strap 1 turn before hooking onto the catch.

To Raise the Awning: Remove the pull strap from the catch and untwist if necessary. Allow the awning to roll up while holding onto the strap.



CAUTION DO NOT RELEASE THE STRAP UNTIL THE AWNING IS AGAINST THE COACH WALL. RELEASING THE STRAP EARLY WILL CAUSE THE AWNING TO SLAM AGAINST THE WALL POSSIBLY CAUSING DAMAGE TO THE AWNING AND/OR VEHICLE.

Tip: When rolling up the awning, hold the end of the pull strap off center. This keeps the strap from rolling up on itself causing stretch marks in the fabric. This also reduces the amount of strap that hangs below the roller in the travel position.

# CLEANING

⚠CAUTION DO NOT USE OIL BASED CLEANERS OR ANY CAUSTIC, GRANULATED, OR ABRASIVE TYPE CLEANERS ON YOUR CAREFREE PRODUCT.

- One of the best ways to keep the fabric looking good and to delay the need for deep or vigorous cleanings is to hose fabrics off on a monthly basis with clear water. This practice will help prevent dirt from becoming deeply imbedded in the fabric. In most environments, a thorough cleaning will be needed every two to three years.
- When it's time for a thorough cleaning, the fabric can be cleaned while on the awning frame.
  - For Vinvl Fabric Use a soft brush and warm water with soap.
  - For Acrylic Fabric Use a stiff brush and warm water with soap.
- 3. When cleaning the fabric, it is important to observe the following:
  - Always use a natural soap. Never detergent.
  - Water should be cold to lukewarm. Never more than 100 degrees.
  - Air-dry only. Never apply heat to the fabric.

## Mildew

Mildew is a fungus growth that looks like dirt. Vinyl coated polyester fabrics are mildew resistant because of a chemical biocide in the vinyl coating. Under ordinary conditions, mildew will not appear. However, in areas where high temperature and humidity are common, mildew can be a problem and require the material to be washed more frequently. THOROUGHLY rinse the fabric with clean water and allow to air dry completely before rolling up the awning.

# Leaking

On vinyl canopies, side hems and poly cords are stitched in with a sewing machine. On occasion, this stitching may allow water to seep or leak through the stitches. This is normal and not a defect covered by warranty. Treat the seams with a quality seam sealer.

# ARM CARE

The best method of keeping the arms operating smoothly is to clean them. Dirt and debris can cause the arms not to move easily. Periodically wash out the channels with running water (i.e. a hose) to keep them clean. If the arms still do not move easily, lightly spray the joints with a dry silicone lubricant after the arms have been cleaned and dried thoroughly.

# Hardware Maintenance

- Replace any parts that become damaged.
- Periodically check all mounting hardware, screws, lags, etc., and re-tighten when necessary.

052533-001r4

# CAREFREE MAJOR PRODUCT LIMITED WARRANTY

Carefree of Colorado (hereafter referred to as Carefree) warrants to the first retail Purchaser that the Carefree Product is free of defects in material and workmanship within the terms and conditions as set forth in the warranty statement available online at www.carefreeofcolorado.com. Carefree's obligation under this warranty is limited to the repair or replacement, at Carefree's option, of any defective component with new or factory refurbished components.

OWNER MUST RETAIN THE ORIGINAL PROOF OF PURCHASE AND/OR HAVE THE PRODUCT WARRANTY REGISTRATION ON FILE AT CAREFREE FOR WARRANTY CLAIMS.

THIS WARRANTY IS NOT TRANSFERABLE.

# For

- Warranty Duration;
- Warranty Coverage and Exclusions;
- Warranty Terms of Coverage; and,
- Warranty Claim Procedures

Refer to publication
052580-111 "Carefree Major Product Limited Warranty"
available online at
www.carefreeofcolorado.com

Register your Carefree products on-line at www.carefreeofcolorado.com

IMPORTANT NOTICE: It is strongly recommended that adjustments and repairs be performed by trained technicians at your Authorized Carefree Dealer. Work performed by non-authorized persons or businesses may void warranty.

Carefree www.carefreeofcolorado.com



# OWNER'S MANUAL TRAVEL'R

# 12V MOTORIZED AWNING

This manual provides operational instructions for:

TRAVEL'R FIXED STEEP PITCH AWNING AND TRAVEL'R ADJUSTABLE PITCH AWNING.



Special Note: This manual provides a basic description of the product and the standard operating controls provided by Carefree of Colorado. Some Original Equipment Manufacturers (OEM's) may alter or change the placement, style and/or functional configuration of the switches. If your controls do not match the style or description included, contact the coach manufacturer for an accurate description. OEM furnished components are not covered by the Carefree warranty.

# NTRODUCTION

From it's beginning in the early 70's, Carefree of Colorado has emerged as the premier manufacturer of quality awnings and accessories for Recreational Vehicles (RVs). Our full line of products can provide the accessories that match your life style; no matter what type of RV you own.

Check with your dealer to discover the products that can make your life more Carefree.

The Travel'r series of awnings provides motorized awning comfort with Carefnee's standards for looks, strength and dependability. It is the successful blend of style quality and economy.

# Features include.

- The unique "scissor" style arms do not require vertical ground supports.
- The adjustable pitch arms provide easy to use 6-position pitch adjustment.
- The awning rollbar and arms are made from light weight, no-rust aluminum.
- The 100% billow-proof, worm-gear drive motor eliminates the need for travel locks.
- Can be installed using a single switch control or with the Direct Response<sup>TM</sup> electronic system.
- Highest head clearance of any vertical arm awning

# TABLE OF CONTENTS

Arm Care Arm Care Timbed Warranty	Pooling	Fabric Care.	Awning Care	Oven	Emergency Operation Override With Ema	Direct Response Operation  Adjusting the Pitch (Adjustable Pitch Awning Only)	Operation Switch Operation	Introduction
Bre Product I imited Warranty	1		perguona	Override Without Emergency Terminals	gency Operation	e Pitch (A	witch Oper	2
mitod Wa			mores Coestoria	ut Emerge	mergenc	¥ = 1		
ranty	100000		4	ncy Term	Termina	Pitch Awning Only)	13	
				mals	-	ing Only)		
						dy)		
					-		1	
								· · · · · · · · · · · · · · · · · · ·

# AWARNINGS

A AWNINGS ARE DESIGNED TO PROVIDE SHADE AND PROTECTION FROM THE SUN. THE EFFECTS OF WIND AND RAIN ON AN AWNING ARE UNPREDICTABLE AND CAN CAUSE SEVERE DAMAGE TO THE AWNING AND/OH THE VEHICLE. IF WIND OR EXTENDED PERIODS OF RAIN ARE EXPECTED, ROLL UP THE AWNING AND SECURE.

A KEEP ALL SOURCES OF HEAT AND FLAME AWAY FROM THE AWAYED CANOPY. FABRIC IS NOT FIREPROOF AND CAN BURN IF LEFT IN CONTACT WITH ANY FLAME OF HEAT SOURCE.

A CAUTION It is recommended that it leaving the RV unattended for a length of time, retract the awning to avoid unexpected citmate conditions

# OPERATION

# STANDARD SWITCH OPERATION

To Operate the Awning:

 Press and hold the Patio Switch until the awning is in the desired position then release the switch.



# DIRECT RESPONSE OPERATION

The optional Travel's Direct Response is system detects awning motion caused by windy conditions. The sensor is located in the motor head.

The system operates by gauging the motion of the awning's front edge (roller tube). When the motion exceeds the factory preset threshold value the system automatically retracts the awning.

Gust detection is incorporated into the software. When the motion value suddenly and sharply increases above a safe maximum value, the awning closes immediately.



To Operate the Awning

Press the power switch to ON. When power is on, the Direct Response system is active and the manual controls are active. When power is OFF, all functions are disabled.


A CAUTION It is strongly recommended that the power switch be set to CIFF whenever the awning is not being operated and during transport. This acts as a safety to prevent the awning from being accidently opened.

- To provide awaing. Pless and hold the acting switch until the awaing is open
- To case the awning. Press and release the retract switch. The awning will dose completely. To interrupt the awning retraction press and release the retract switch again. The awning will stop.
- When the awning is in the retreated (rolled up) position, shut off the power switch to svoid accidentally extending the awning.

Don't have Birect Response?
Contact your Curefree dealer about having an upgrade at matared

# ADJUSTING THE PITCH (ADJUSTABLE PITCH AWNING ONLY)

having to reset the pitch between uses. See the Warnings about unequal pitch settings. The Travel'r arms have 6 pitch adjustment settings from minimum pitch to maximum The awning can be extended and retracted in any of these positions without

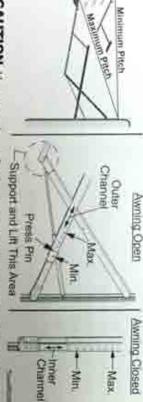

A CAUTION Use care when adjusting the pilch as the awning may move abruptly With the Awning Open

- Hold on to the awning arm to keep it steady while adjusting the pitch
- Press in the pitch adjustment pin located on the long scissor arm.

press the pitch adjustment pins. Tip. Applying LIGHT pressure on the arm will decrease the force required to

Slide the scissor arm to the desired set hale - towards the coach for a lower pitch and away from the coach for a higher pitch

With the Awring Closed

- Press in the pitch adjustment pin located on the long scissor arm
- Slide the inner scissor arm up or down to the desired set hole

POSITIONS DIFFERENT BETWEEN THE LEFT AND RIGHT ARM. DAMAGE TO THE ARMS AND CANORY CAN OCCUR IF THE AWNING IS RETRACTED WHEN THE ARMS ARE SET AT MORE THAN 3 POSITIONS MARNING DO NOT SET THE INDIVIDUAL ARM PITCH AT MORE THAN THREE (3)

PITCH. DAMAGE TO THE ARMS AND CANOPY CAN OCCUR IF THE AWNING IS RETRACTED WITH THE ARMS UNEVEN. AWARNING FOR AWNINGS UNDER 12": THE ARMS MUST BE SET AT AN EQUAL

# **EMERGENCY OPERATION**

override connections (12V). The override can be used with a 10V-14V power If the original power source fails or is unavailable, the Travel'r has emergency source, such as a cordless drill battery or car battery.

motor head. If the motor head has the metal terminals, use the procedure "Override with Emergency Terminals". For models built in 2013 and later, use "Override without Emergency Terminals" Travel'r models built through 2012 have override terminals on the back of the

source! Doing so will permanently damage the awning AWARNING Do not connect the Travel's motor wires to a 110V power

NOTE: Jumper cables may be built in one of two styles as shown below. The A CAUTION Use care when retracting the awning, the awning may move abruptly procedures are the same for either cable style.



External Emergency Terminals or Motor Cables with Quick Disconnects Universal Cable with Alligator Clips for



Grant House,


# OVERRIDE WITH EMERGENCY TERMINALS

grounding the motor leads. Steps 1 & 2 removes the brake to allow the emergency overnde to work A CAUTION Do not use the emergency terminals without following the discious below. The electronic circuit creates a dynamic brake for the inche by shorting and









Emmiget Ty DETAIL C

- small screws in the rear of the motor head (Defail A) Remove the front cover from the moths head. There are six [6]
- disconnect the wires to the motor (Detail: B) Disconnect the input cable wires from the terminals DO NOT
- 8 Leave the wires disconnected and reattach the front cover
- (Detail C) Attach jumper leads to the terminal located on the rear of the
- Connect the other ends of the jumper leads to a 12V source. If the award moves in the wrong direction, reverse the haids.
- Maintain contact throughout the retraction process

# OVERRIDE WITHOUT EMERGENCY TERMINALS

This procedure does not apply if Direct Response a metallic

When Arm is Closing Outside of Channel

Hold Wires

- W.N Attach jumper wires to the motor wires
- The wrong direction, reverse the leads to a 12-14V source. If the awning moves in Connect the other ends of the jumper leads
- 4 Bullima the outside of the channel white closing the process. Hold the wires from the motor on Maintain contact throughout the refraction This provides access for opening
- D wires and extend the awning to access the disconnects and secure in the arm channel When power is restored, use the jumper disconnects. Reattach

NOTE: Jumper cables may not be included with some OEM installations. Cables are available through your dealer



# COMMON OPERATIONAL QUESTIONS

normal operation The following items are operational items that may come up as questions during

- occurs, wall approximately 15 minutes to allow the motor to cool then operate the awning in normal fashion. cause the circuit to sense a overheat condition and shut off the motor. If this from overheating. Operating the awning repeatedly over a short time period may The awning motor is equipped with a thermal protection circuit to protect the motor
- 10 acceptable voltage range (10VDC-14VDC) the awning will move slower. seconds to extend or retract. If the power supply is on the low side of the The awning seems to extend and retract slowly. Normal operation time is 28-35
- w Alumaguard or Uniquaird may "bounce" creating a wave like motion in the careby fabric. This will create the appearance of moving jerkily The awning may appear to move jerkly. When the fathro is rolled out, the
- vinyl carriopy, the virry will have a tendency to "ding" to the Uniquard when not With Uniquard, the awning sticks or hangs up. When Uniquard is installed with a times, the awning will then open normally. used over an extended period. Open and close the awning in short bursts 2 or 3

at www.carefreedoorga.b.com for a listing of dealers and service canters If the awning does not operate, contact your Carefree Service Center. Visit our web site

# **AWNING CARE**

Maintaining a Carefree Awning is easy. Just follow these basic steps

- Always operate the awning according to the instructions
- Periodically check that the fasteners are light. Tighten if necessary
- Keep the awring fabric and arms clean.

# FABRIC CARE

Closed MININ

abrasive type cleaners on your Carefree product A CAUTION DO not use oil based cleaners or any caustic granutated; or

- One of the best ways to keep the fabric looking good and to delay the need for fabric. In most environments, a thorough cleaning will be needed every two to deep or vigorous cleanings is to hose fabrics off on a monthly basis with clear three years. This practice helps prevent dirt from becoming deeply imbedded in the
- When it's time for a thorough cleaning, the fabric can be cleaned while still on the awning frame.
- For Vinyl Fabric Use a soft brush and warm water with soap
- For Acrylic Fabric Use a sliff brush and warm water with soap
- When cleaning the fabric, it is important to observe the following

w

- Always use a natural soap, never delergent
- Water should be cold to lukewarm, never more than 100°F
- Air-dry only. Never apply heat to the fabric.
- Always allow the fabric to dry thoroughly before rolling up the awning

material to be washed more frequently. ordinary conditions, mildew will not appear. However, in areas where high mildew resistant because of a chemical blocke in the vinyl coating. Under temperature and humidity are common, mildew can be a problem and require the Mildew is a fungus growth that books like dirt. Vinyl coaled polyester labrits are

# POOLING

awning. The water is sumped when the awning is retracted. It is recommended When water collects on the top of the labric, this is known as "pooling". This can occur during inclement weather or if a running air conditioner discharges over the water. This will help prevent the fabric from stretching or distorting that if water accumulates on the top, retract the awning in steps (8"-12") to dump the

PERIODS OF RAIN ARE EXPECTED, BOLL UP THE AWKING AND SECURE FOR TRAVEL damage to the awning and the vehicle may result. IF WIND OR EXTENDED The effects of wind and rain on an awning are unpredictable. Severe

LEAKING

On virylicamples, side here and poly cords are elliched in with a sewire machine. On occasion, this alliching may allow water to seep or less through. This is normal and not a bellied covered by warranty. Treat this seems with a quality seem sealer.

# ISM CARE

The test method of keeping the entre and types operating structby is to dean them bir and dram aim cause the entre and to make easily. Persolically wash out the drawer with namely wash out the entre of the entre selly ferrolled in our move easily. Only

# CAREFREE MAJOR PRODUCT LIMITED WARRANTY

Carefree of Colorado (hereafter referred to as Carefree) warrants to the first retail Purchaser that the Carefree Product is free of defects in material and workmanship within the terms and conditions as set forth in the warranty statement available online at www.carefreeofcolorado.com. Carefree's obligation under this warranty is limited to the repair or replacement, at Carefree's option, of any defective component with new or factory refurbished components.

OWNER MUST RETAIN THE ORIGINAL PROOF OF PURCHASE AND/OR HAVE THE PRODUCT WARRANTY REGISTRATION ON FILE AT CAREFREE FOR WARRANTY CLAIMS.

THIS WARRANTY IS NOT TRANSFERABLE.

# For

- Warranty Duration;
- Warranty Coverage and Exclusions;
- Warranty Terms of Coverage; and,
- Warranty Claim Procedures

Refer to publication
052580-111 "Carefree Major Product Limited Warranty"
available online at
www.carefreeofcolorado.com

Register your Carefree products on-line at www.carefreeofcolorado.com

Publications available on-line @ www.carefreeofcolorado.com:

052540-221 Travel'r, Owner's Manual

052540-002 Travel'r Fixed Pitch Installation Manual

052540-021 Travel'r Adjustable Pitch Installation Manual

052540-301 Travel'r Service Manual

IMPORTANT NOTICE: It is strongly recommended that adjustments and repairs not described in this book be performed by trained technicians at your Authorized Carefree Dealer. Work performed by non-authorized persons or businesses may void warranty.

